




QUICK START GUIDE

Automatic calf feeder - powder


1.1 Installation checklist

This document provides a brief overview of the things that need to be taken into account when commissioning a feeder for the first time.

- 1** Connect water
- 2** Connect power
- 3** Provide draining options
1 on the left side of the feeder, 1 in front of the feeder in the middle of the housing and 1 at every
- 4** Establish ground connection

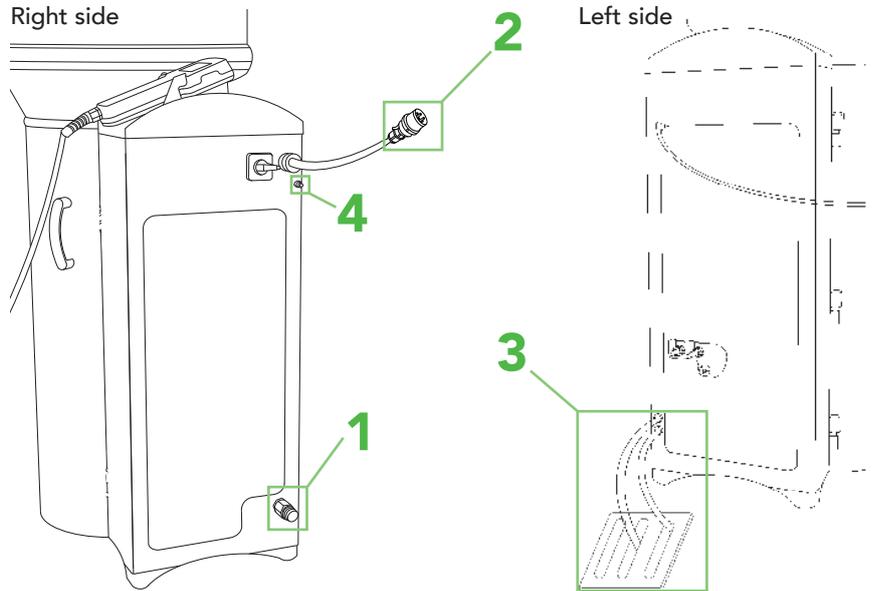


- 5** Mount and connect raceway, antenna and suction point
For more details, see the corresponding assembly instructions.

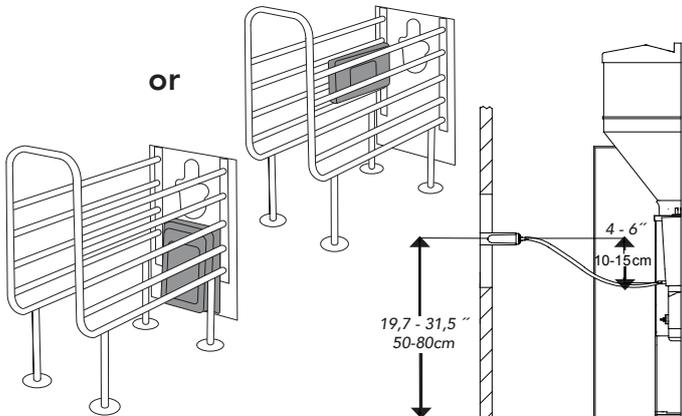

- 6** Connect Ethernet cable
Open door on the left side and plug it in
TIP: check QuickStartGuide 2.3.CalfCloud

- 7** Mount protective grid
- 8** Fill with the milk powder

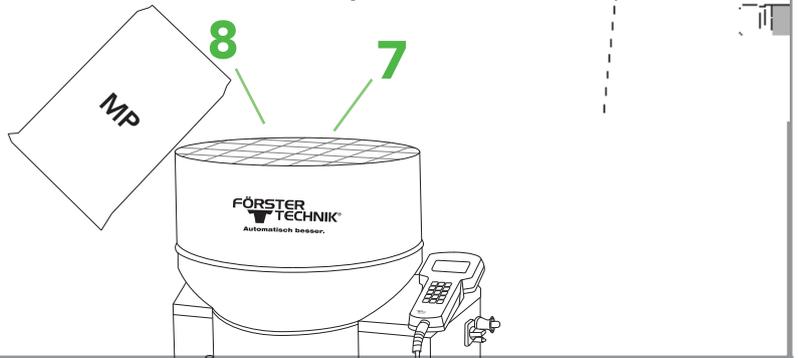


- 9** Switch on vapour screen for powder outlet *if available*
TIP: The switch can be found on the main board of the calf feeder (*Open the plate on the back*)



- 10** Install external detergent supply



- 11** Turn the automatic feeder on

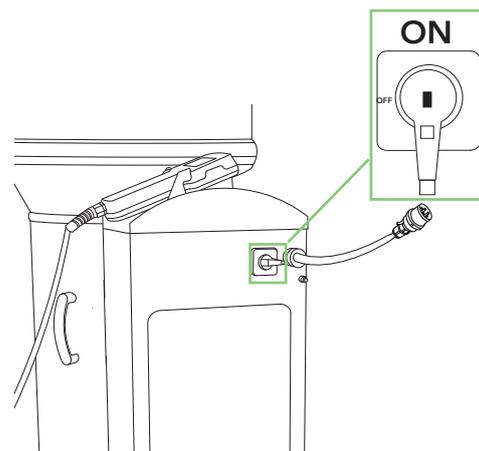

QUICK START GUIDE

Automatic calf feeder powder- 1.1 Installation checklist

First settings at the Handheld

14 Enter basic settings (date & time)

This is automatically displayed after switching on the machine


15 Fill the boiler

Fault message boiler is automatically displayed

press → boiler is filled now

16 Reinstall everything

→ → → confirm everything

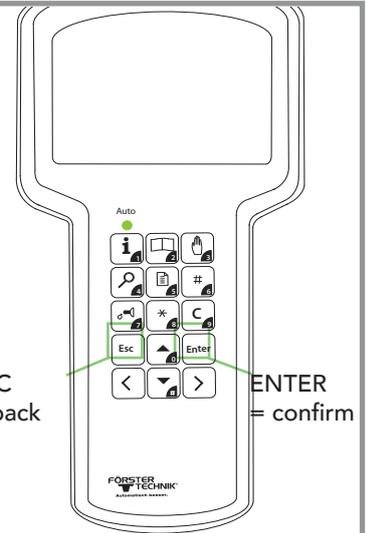

15 Setup configuration

Turn off the feeder → Keep pressed

→ Turn on the feeder and hold button until the **setup menu** is displayed.

a) Read in ID-chip

[**setup menu**] → →

b) Check / change Setup settings

```
Setup
language: [ English]
time/date
machine
equipment
identification
ID-chip
calibration scale
stations
terminal
communication
SD card
service
```

c) Adjust the calibration scale if available then exit Setup

16 Calibration

TIP: check QuickStartGuide 1.3 & 1.4 Calibration

Calibrate all existing components at least 3 times during initial commissioning.

Water, MP, additives

→ →

17 Cleaning before commissioning

TIP: check QuickStartGuide 1.6 & 1.7 Cleaning

Fill up detergent & clean

Check cleaning settings

→ →

Attention: detergent quantity is set to 0ml by default

Circuit cleaning

→
→
→




18 Set feeding plans, portion settings and operating mode

TIP: check QuickStartGuide 1.2 feeding plan

19 Reading in transmitters to store them in the system

TIP: check QuickStartGuide 1.8 animal management

→ →
→ Hold a transmitter next to the antenna in the raceway.

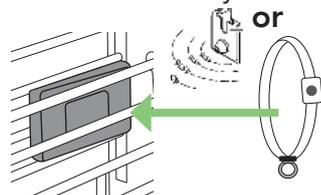

→

20 Register animals to allow feeding

TIP: check QuickStartGuide 1.8 animal management

Besides a manual registration, it is possible to register calves automatically to the calf feeder.

automatically

→ →
→ →